


AIR OUTLET CONTROL SERVO MOTOR (for Automatic Air Conditioning System)

COMPONENTS

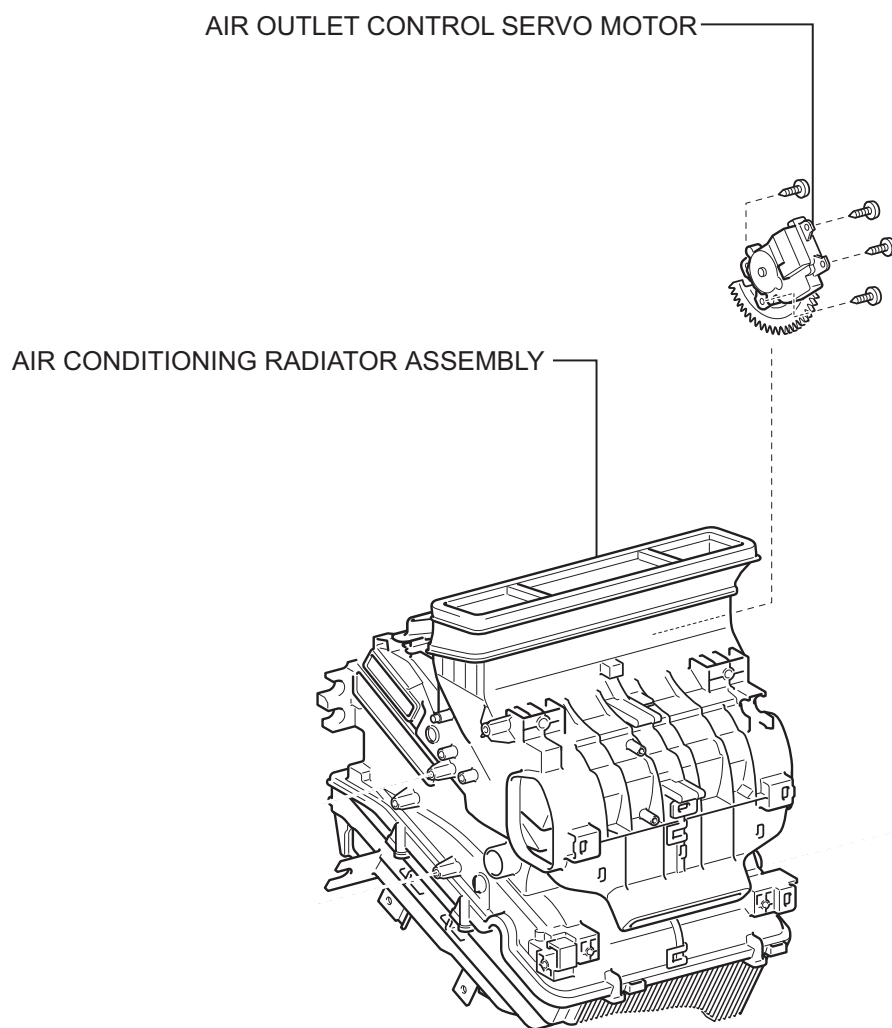

AC

REMOVAL

1. REMOVE AIR CONDITIONING UNIT



- Remove the air conditioning radiator (see page [AC-185](#)).

2. REMOVE AIR OUTLET CONTROL SERVO MOTOR (See page [AC-191](#))

INSPECTION

1. INSPECT AIR OUTLET CONTROL SERVO MOTOR

- Inspect the servo motor operation.

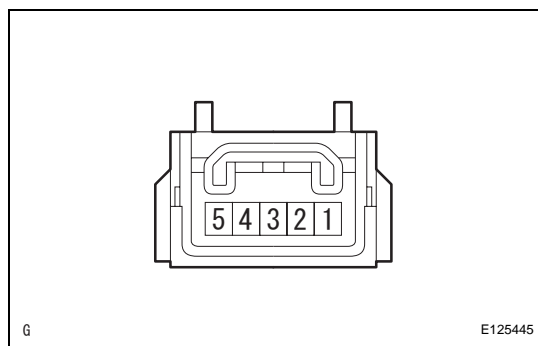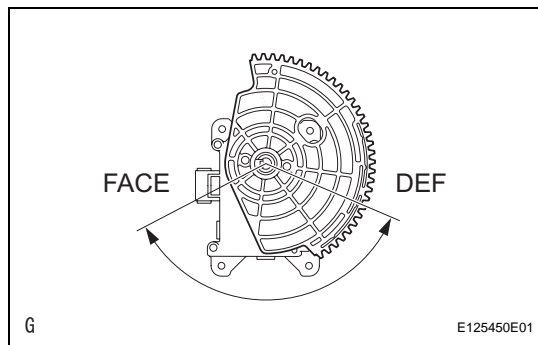

- Connect the positive (+) lead from the battery to terminal 4 and negative (-) lead to terminal 5, and then check that the lever turns to the "FACE" position smoothly.
- Connect the positive (+) lead from the battery to terminal 5 and negative (-) lead to terminal 4, and then check that the lever turns to the "DEF" position smoothly.

If the operation is not as specified, replace the air outlet control servo motor.

INSTALLATION

- 1. INSTALL AIR OUTLET CONTROL SERVO MOTOR**
(See page [AC-196](#))
- 2. INSTALL AIR CONDITIONING UNIT**
 - (a) Install the air conditioning radiator (see page [AC-197](#)).